

Quick Use Guide



MX3900D • MX3950D





PHILIPS


12nc 3139 115 22042
Printed in China

Use this simple and quick way to watch your favorite DVD movie and enjoy your Home Cinema experience!

Recommended Speaker Setup

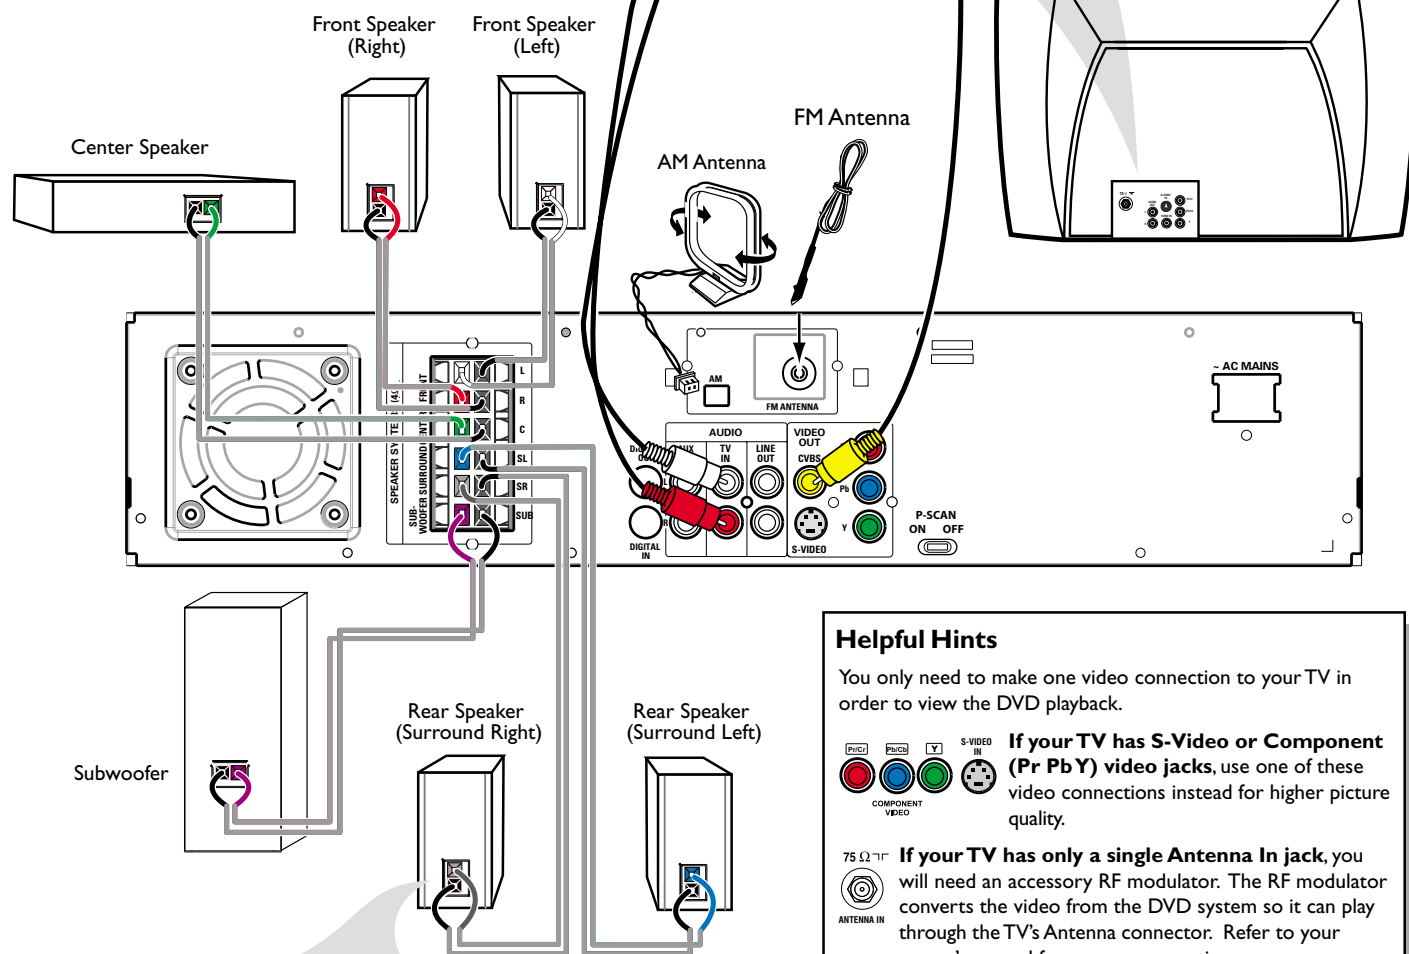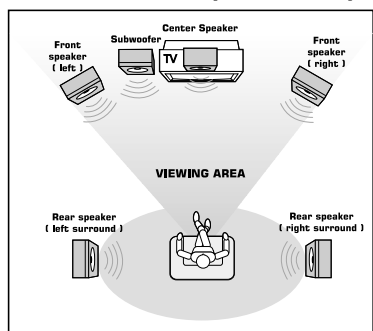

Connecting Speaker Cable

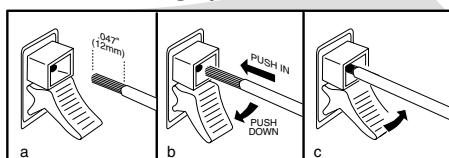

Helpful Hints

You only need to make one video connection to your TV in order to view the DVD playback.



If your TV has S-Video or Component (Pr Pb Y) video jacks, use one of these video connections instead for higher picture quality.

If your TV has only a single Antenna In jack, you will need an accessory RF modulator. The RF modulator converts the video from the DVD system so it can play through the TV's Antenna connector. Refer to your owner's manual for proper connection.

Do not switch the P-SCAN to 'ON' position, unless you have connected the DVD system to a Progressive Scan TV using the Component (Pr Pb Y) video jacks.

When listening to TV programs, press TV/AV button on the remote to set the DVD system to TV/AV mode in order for the sound to be heard.

continue...

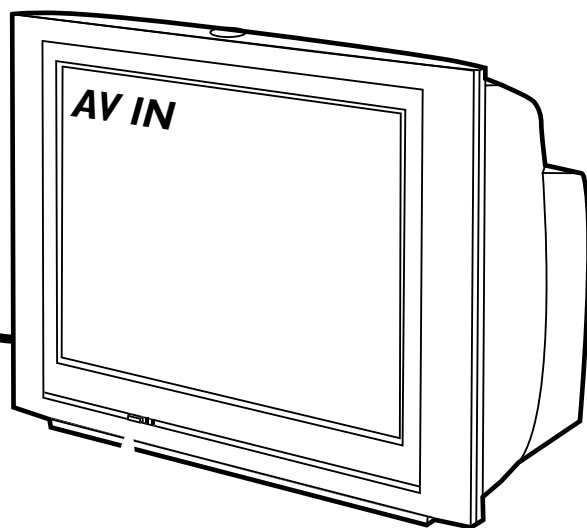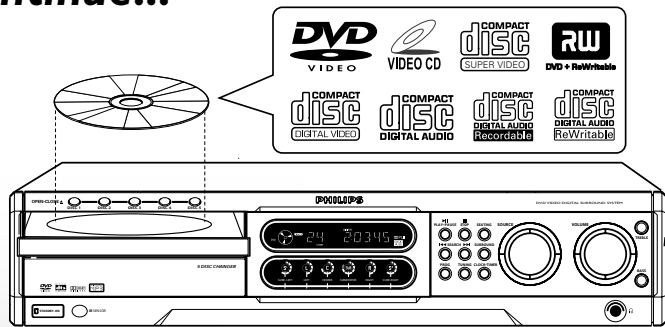

Make sure your DVD system and TV are connected and turned on!

Playing a disc

1 Press DISC/MEDIA on the remote control.

You can also adjust the SOURCE button on the front panel until "DISC X" appears on the display panel.

2 Turn on the TV and select the correct Video In mode.

You should see the blue Philips DVD background screen on the TV (if no disc in the DVD system). Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO.

Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.

Or, your TV remote control may have a button or switch that chooses different video modes.

Do not use channel 3 or 4 on the TV unless you are using an RF modulator.

See your TV manual for more details.

3 Press OPEN•CLOSE ▲ on the front of the DVD system and load a disc, then press the corresponding OPEN•CLOSE ▲ again to close the disc tray.

Make sure the disc label facing up. For double-sided discs, load the side you want to play facing up.

4 Playback will start automatically.

If a disc menu appears, use ▲▼◀▶ buttons on the remote to make the necessary selection, then press OK to confirm. Or, use the numeric keypad on the remote to select features. Follow the instructions given in the disc menu.

5 To stop playback, press STOP ■.

Region Codes

DVDs must be labeled for ALL regions or for Region 1 in order to play on this DVD system.



Helpful Hints

If a DVD does not play properly, please contact Philips at 1-800-531-0039 for assistance. Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete.

You should find the below accessories in the packaging box. If not, call Philips at 1-800-531-0039.

Speaker cables 	Component video cables (red, blue, green) 	FM wire antenna 	Brackets and screws (4x)
Subwoofer cable 	Audio cables (white, red) 	AM loop antenna 	AA size batteries
Composite video cable (yellow) 		AC power cable 	



Detailed playback features and additional functions are described in the accompanying owner's manual.